

BEDIENUNGSANLEITUNG

 
S00-40083-145

S00-40083-170

S00-40083-190

S00-40083-228

Downlight LUNA weiss

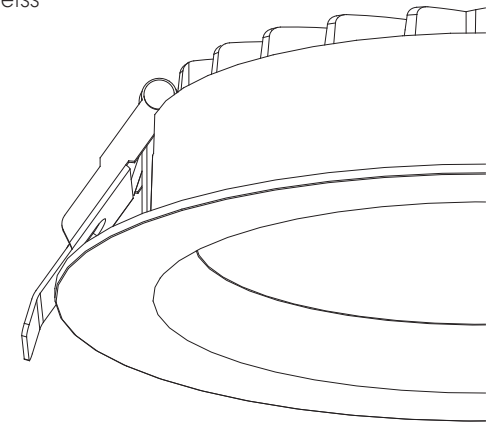

Important Safety Instructions


Basic safety precautions should always be followed when installing, including the following:

1. Read instructions & check you have all the tools & accessories to complete the installation correctly.
2. Licensed electrician for installation only.
3. Always ensure the power is OFF and the fitting has cooled down before performing any maintenance, cleaning, changing the globe or adjustment to the fitting.
4. Do not install any luminaire near the heat source.
5. Do not exceed the nominal supply voltage or amperage ratings.
6. To avoid injury or damage to the fitting, please ensure that power leads and screws are secure before connecting the power.
7. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.



Installation Instruction

 Fig 1: Installation Spacing

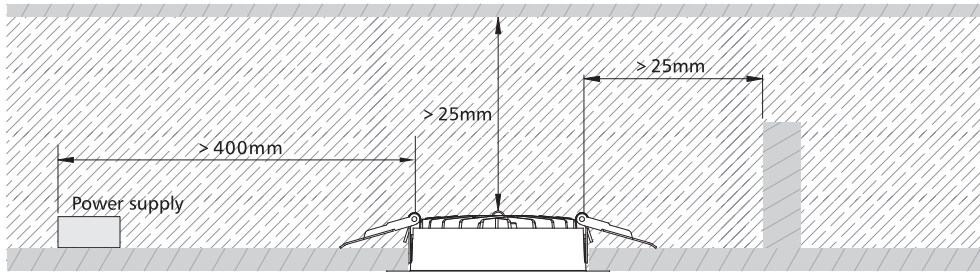

Ceiling cutout table

| Downlight Dia (inch) | 2 | 2.5 | 3 | 3.5 | 4 | 5 | 6 | 8 | 10 |
|----------------------|-------|-------|-------|---------|---------|---------|---------|---------|---------|
| Ceiling Cutout (mm) | 60-65 | 68-75 | 90-95 | 100-110 | 120-130 | 140-150 | 160-170 | 200-210 | 230-260 |

IP rating table: Before installation, please check the IP label on the luminaire to choose the right place to install.

| | |
|------|--|
| IP20 | Indoor use only, do not use in wet or damp place. |
| IP54 | Suitable for indoor areas including bathrooms and covered/sheltered areas such as porches. |

Dimmer selection table: Before installation, please check the information of driver as below.

| | |
|-----------|--|
| Non-dim | Can not be used with any dimmer. |
| Triac dim | Compliable with recommended TRIAC dimmers, dimming range 8-100%. |
| 0/1-10V | Only work with 0/1-10V dimming system, dimming range 8-100%. |
| DALI | Only work with DALI dimming system, dimming range 8-100%. |

 
Installation Procedure

WARNING

1. Switch off power supply before installation / maintenance.
2. Switch on only after complete installation and examination of the circuit.
3. Professional electrician for installation and maintenance only.



Downlight with external driver

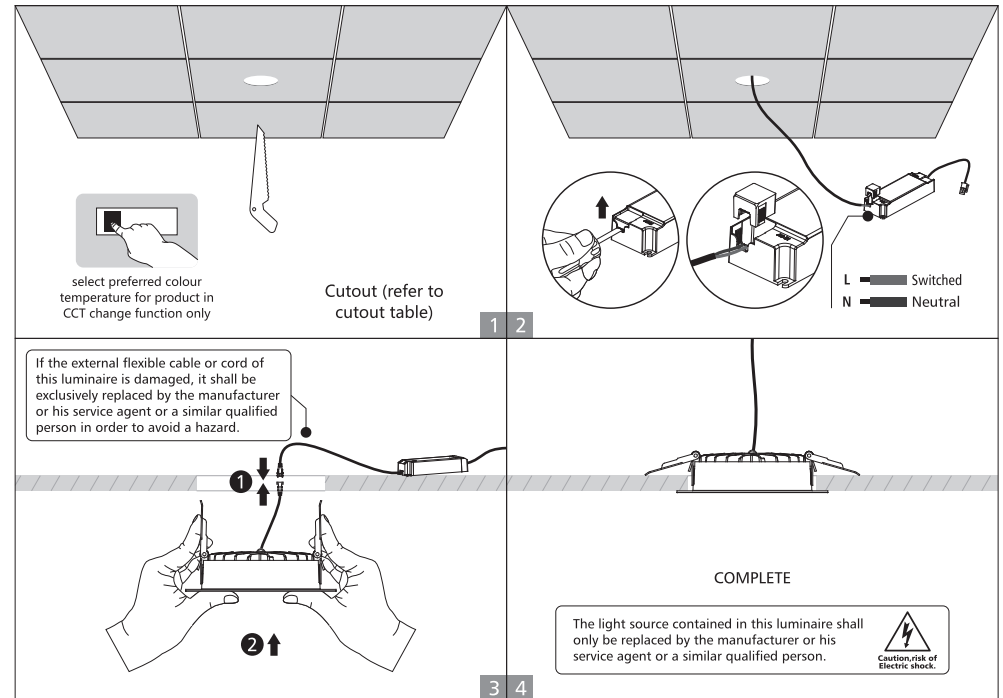

Dieses Produkt enthält eine Lichtquelle der Energieeffizienzklasse <E>.

